

# INSTALLING YOUR NEW GRAPHIC

To ensure good adhesion, it is critical that you follow these procedures in preparing the surface prior to any vinyl installation.


Surface temperatures should be between 50 and 90 degrees fahrenheit before attempting the installation.

- A) Wash and rinse the area with liquid dish detergent and warm water. Then dry the surface with a clean, lint-free towel.  
B) Finish the cleaning process by wiping the entire area with rubbing alcohol. To avoid recontamination during the final cleaning step, wipe the surface in just one direction, using a clean, lint-free towel.




## 1 Position graphic in desired location

- Hold in place at top with masking tape

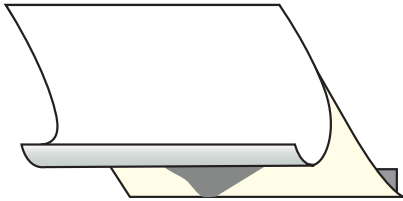


## 2 Lift from bottom and partially remove liner

- Pull graphic down without allowing contact

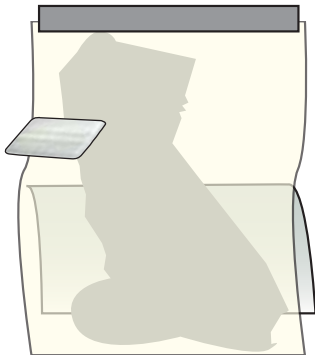

## 3 Use the supplied squeegee to apply

- Work down from top overlapping from left to right
- Pull the liner down as you go, while pushing the air down and out with the squeegee

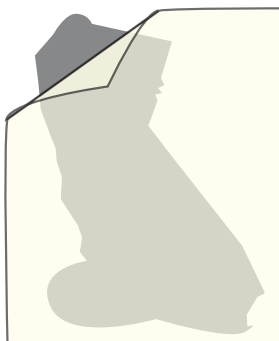

## 4 Slowly and carefully remove tape and liner

- Remove any remaining air bubbles with an Exacto blade or needle
- Puncture bubbles and squeegee until flat

Now you're ready to mark where you've been with the supplied "RODE THAT" stamps. Be sure to clean each time before applying them.

TAKE CARE WHEN APPLYING AND/OR REMOVING THIS GRAPHIC. OHV ZONE WILL NOT BE HELD RESPONSIBLE FOR DAMAGE CAUSED TO SURFACE OR FINISH FROM IMPROPER APPLICATION OR REMOVAL.